

Cuisinart®

Power Advantage 7-Speed Hand Mixer with Storage Case

HM-7BCSXA



Instruction
Booklet



www.cuisinart.com.au

Follow us @cuisinart_au

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

Contents

Important Safeguards	2
Parts & Features	4
Quick Tips Guide	5
Operating Instructions	6
Warranty	6

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING

When using any electrical appliance, especially when children are present, **basic safety precautions should always be taken to reduce the risk of fire, electric shock and/or injury**, including the following:

1. This appliance is intended for **HOUSEHOLD USE ONLY** and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - clients in hotels, motels and other residential type environments;
 - bed and breakfast settings
2. **Turn the appliance OFF, then unplug from the outlet when not in use or approaching parts that move in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.**
3. To protect against risk of electric shock, do not put the hand mixer motor housing or cord in water or other liquids. If hand mixer motor housing or cord falls into liquid, unplug the cord from outlet immediately. Do not reach into the liquid.
4. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
5. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters and other accessories/attachments during operation to reduce risk of injury to persons, and/or damage to the mixer.
6. Remove any accessories such as detachable beaters from the mixer before washing.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
8. The use of attachments not recommended by Cuisinart may cause fire, electric shock, or risk of injury.
9. Do not use outdoors or anywhere the cord or mixer might come into contact with water while in use.
10. To avoid possibility of mixer being accidentally pulled off work area, which could result in damage to the mixer or in personal injury, do not let cord hang over edge of table or counter.
11. To avoid damage to cord and possible fire or electrocution hazard, do not let cord contact hot surfaces, including the stove.


12. Use storage case to specifically store hand mixer unit and attachments.

SAVE THESE INSTRUCTIONS

Before the First Use

Before using the Cuisinart Power Advantage Hand Mixer for the first time, we recommend you wipe it with a clean damp cloth to remove any dirt or dust. Dry it thoroughly with a soft, absorbent cloth and handle carefully.

Parts and Features

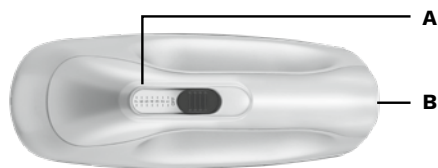

Automatic Feedback

No need for a power boost. An electronic feedback mechanism automatically feeds in extra power when needed. It assures that the mixer will not bog down, even when mixing heavy loads.

Easy to Clean

The Power Advantage 7-Speed Hand Mixer has a smooth, sealed base; wipes clean instantly.

A. Speed Control

Fingertip control for all speeds.

B. Rotating Cord

Unique center cord will freely rotate with comfort for right- or left-handed use.

C. Beater Release Lever

Conveniently located for easy ejection of beaters, whisk, or dough hooks.

D. Heel Rest

Allows mixer to rest upright on countertop.

E. Easy-Clean Beaters

Two extra-wide beaters for easy aerating and mixing. Designed with no center post to prevent ingredients from clogging up beaters. Beaters are easy to clean, and are dishwasher safe.

F. Balloon Whisk

Great for whipping heavy cream or egg whites. May also be used for anything that you would normally whisk by hand, like crêpe batters or eggs for omelettes.

G. Dough Hooks

For preparing and kneading yeast doughs such as pizza and bread doughs. Easy to clean and dishwasher safe.

H. Storage Case

Safely stores hand mixer and accessories.

I. BPA Free (not shown)

All materials that come in contact with food are BPA free.



200 Watt DC Motor

Powerful enough to easily cut through a double batch of cookie dough or butter right out of the refrigerator.

Maximum Comfort

Balanced to do more work for you. The shape of the mixer allows for maximum possible power and balance. Stress-free grip provides unparalleled comfort and control, even during extended mixing.

Quick Tips Guide

Mixing Techniques

For mixing attachments only.

NOTE: The balloon whisk attachment is used only for light whipping. For all other mixing tasks, use the beaters or dough hooks.


SETTING	MIXING TECHNIQUES
Speed 1	• Start mixing most ingredients together • Start whipping cream • Start whipping egg whites • Fold delicate creams and egg whites into batters • Mix muffin and pancake batters
Speed 2	• Add nuts, chips, and dried fruit to doughs and batters • Sift and aerate dry ingredients • Add dry ingredients to batters/doughs • Mix heavy cookie doughs • Start kneading yeast doughs
Speed 3	• Cut cold butter into dry ingredients (for pie doughs, biscuits, and pastries) • Mix cake batters • Whip potatoes/squash • Finish kneading yeast doughs
Speed 4	• Mix cookie dough • Cream butter and sugar until light and fluffy • Add eggs to batters/doughs
Speed 5	• Mix cookie dough • Cream butter and sugar until light and fluffy • Add eggs to batters/doughs
Speed 6	• Whip egg whites
Speed 7	• Finish whipping cream • Finish whipping meringues and egg whites

Operating Instructions

Using the Mixer

Inserting Beaters and Dough Hooks

With the mixer off and unplugged, insert beater or dough hook with collar into the larger hole. Push beater or dough hook in until it clicks into place. Insert the beater or dough hook without collar into the smaller hole. Push beater or dough hook in until it clicks into place.

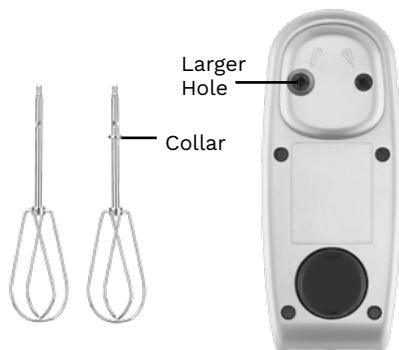

Inserting Balloon Whisk

With the mixer off and unplugged, hold balloon whisk at stem end, and insert into either hole. Push whisk in until it clicks into place. **DO NOT PUSH WHISK IN FROM WIRE END, AS YOU MAY DAMAGE WIRES.**

Turning Mixer On/Off

Plug mixer into outlet. Slide switch to turn mixer on. Mixer will immediately begin to mix on Speed 1. To turn mixer off, slide switch to OFF.

Changing Speeds

Slide switch amongst the 7 speed controls to increase or decrease the speed.

Attaching and Removing Storage Case from Mixer

1. Place accessories in case, then tuck in the mixer cord.
2. Align the tab on the back of the case with the bottom air vent in the back of the mixer. Gently push down the front of the mixer onto the case to secure.

3. To remove the mixer from the case, hold case firmly, slightly push toward the back of the mixer while lifting mixer up from the front. Pull out the mixer from tab in the back of the case.

Removing All Accessories

With the unit turned off, unplug from wall outlet. Lift the beater release lever and remove the accessories from the mixer.

Cleaning & Maintenance

1. Wash beaters, dough hooks and whisk after each use in hot, soapy water or in a dishwasher.
2. **Never put the motor housing in water or other liquids to clean.** Wipe it with a damp cloth or sponge. Do not use abrasive cleansers, which could scratch the surface.
3. When not in use, your hand mixer should be disconnected, wiped down and stored in a safe, dry location out of reach of children. Use the storage case provided with hand mixer.

Any other servicing should be performed by an authorized service representative.

Note: do not use the Cuisinart® Hand Mixer with nonstick cookware.

Warranty

Cuisinart warrants that, in the unlikely event that this product develops any malfunction within **24** months of purchase of the product used for household or domestic use (or within 3 months of purchase of the product used for commercial use) due to faulty workmanship, materials or manufacture, we will either (at our discretion) repair or replace it for you.

This warranty applies for a period of **24** months for products purchased for household or domestic use (and 3 months for products purchased for commercial use) from the date of purchase of the product after which time the warranty expires and has no further force of effect.

Should you experience any operating difficulties contact Customer Service for advice on **1800 566 567 in Australia or 0800 456 546 in New Zealand.**

Please retain your **Purchase Receipt** as proof of purchase in order for your warranty entitlement to be valid. This document must be presented in the event of making a claim under the terms of the Cuisinart Warranty Policy.

During the warranty period Cuisinart will repair or replace (at our discretion) any defective product. However, if the product includes a number of accessories, only the defective part or relevant accessory will be replaced. Cuisinart reserves the right to make minor adjustments to fix any defect instead of replacing the entire product or accessory. Packaging, instructions, recipe books etc. will not be replaced unless faulty. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

If a spare part is required under warranty it will be shipped to the customer or retailer at No Charge.

In the event of a product or accessory being replaced during the warranty period, the guarantee on the replacement product or accessory will expire 24 months for household or domestic use (or 3 months for commercial use) from the original purchase date.

This warranty does not include or cover the following:

- Defects caused by the product not being used in accordance with instructions;
- Defects caused by accidental damage;
- Defects caused by misuse or negligent handling of the product;
- Defects caused by the product not being maintained or cleaned according to instructions;
- Defects caused by being tampered with by unauthorised persons;
- Defects which are normal or fair wear and tear;
- Freight or any other costs incurred in making a claim;
- Consumable items or accessories that by their nature and limited lifespan require periodic renewal (such as filters, seals, blades or related accessories, such as trays, racks or utensils);
- Products serviced or modified other than by Cuisinart or an authorised Cuisinart representative;
- To any claims made beyond 12 months if the filament of the light bulb breaks i.e. the light bulb has burned out;
- Exposure of the product to abnormally corrosive conditions;

- Any product which has its serial number or appliance plate removed or defaced;
- To any claims made beyond 3 months from the date of purchase if the product is used in commercial, industrial, educational or rental applications; or
- To any claims made beyond 24 months from the date of purchase if the product is used in household or domestic applications.
- Products purchased from any person who is not a retailer serviced by Conair's authorised distributors, overseas retailers, parallel importers or purchased second hand.

The benefits given to you by our warranty are in addition to other rights and remedies under the Australian Consumer Law.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Guarantees Act.

To make a warranty claim or spare part, contact our customer service agents:

Cuisinart Australia

Ph: 1800 566 567

PO Box 146, Terrey Hills

NSW 2084 AUSTRALIA

Cuisinart New Zealand

Ph: 0800 456 546

YOU MUST provide your full name, address, email and phone details. A copy of your proof of purchase must be supplied.

You can contact Cuisinart Australia/New Zealand via email at aus_cuisinart@conair.com or through the "Contact Us" option on the Cuisinart website www.cuisinart.com.au

The warranty contained in this document is provided by:

Conair Australia Pty Ltd (ACN 068 492 044)
(Cuisinart)

18 Rodborough Rd,

Frenchs Forest, NSW 2086

Australia

**Scan to get started with
your new hand mixer.**



www.cuisinart.com.au