

Blast & GO  
Portable Personal Blender

PBL-100XA



Cuisinart®

Instruction  
Booklet



www.cuisinart.com.au  
Follow us @cuisinart\_au



For your safety and continued enjoyment of  
this product, always read the instruction  
book carefully before using.

Important Safeguards

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

1. This appliance is for domestic use only and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by customers in hotels, motels and other residential type environments; bed and breakfast type establishments.
2. Care should be taken when handling the attachments, during use and cleaning.
3. Be careful if hot liquid is poured into the blending jug as it can be ejected out due to sudden steaming.
4. The appliance is not intended to be operated by means of external timer or separate remote control system.
5. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should always be supervised to ensure that they do not play with this product.
7. This appliance shall not be used by children. Keep the appliance out of reach of children during and after use.
8. Always inspect the appliance and appliance accessories before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact Cuisinart Customer Service.
9. Do not use the appliance if the cable is damaged. In the event of cable damage,

discontinue use immediately. If the cable is damaged it must be replaced by the manufacturer by calling the Cuisinart Customer Service team. No repair must be attempted by the consumer.

10. Never pull the plug out of the mains socket by the cable.
11. Do not wrap the cable around the main body of the appliance during or after use.
12. The appliance is safe to be left plugged into the electrical supply when not in use to ensure the batteries are always charged. It should however be unplugged before assembling, disassembling, cleaning or if not being used for a prolonged period of time.
13. This product contains a Lithium Ion rechargeable battery pack that is not to be removed from the appliance for charging. The batteries in this appliance are non-replaceable.
14. The supply terminals are not to be short circuited.
15. **WARNING:** Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from attachments during operation to reduce risk of injury to persons, and/or damage to the appliance. A spatula may be used, but only when the unit is not operating.
16. **WARNING:** Do not put fingers near the attachments. To dislodge food ensure mixer is not in operation first.
17. The charger should be plugged into an electrical socket away from a sink or any hot surface.
18. Do not use an extension cord. Plug the charger directly into an electrical socket.
19. Do not charge the unit using an outdoor socket.
20. To protect against electrical shock, do not put the main unit in water or other liquids. Only the attachments, of this appliance,

have been designed for submersion in water or other liquids. Never submerge any other portion of this unit. If the main unit falls into liquid, remove immediately, clean and dry the unit thoroughly before continuing.

21. Do not overload the blending cup. Observe the maximum fill line.
22. Do not run the blender empty - this will damage the motor.
23. Do not blend hot liquids in the blending cup.

**CAUTION: Handle the blade carefully. The blades are sharp and may cause injury. DO NOT attempt to remove blades from assembly.**

**N.B.** The stainless steel blade cannot be removed from the black blade assembly.



**WARNING:** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

Safety During Use

1. Do not use an extension cord. Plug the charger directly into an electrical socket.
2. Do not charge the unit using an outdoor socket.
3. To protect against electrical shock, do not put the main unit in water or other liquids. If the power base falls into liquid, remove immediately, clean and dry the unit thoroughly before continuing.
4. Always use the blender on a clean, sturdy and dry surface.
5. Never use carbonated beverages in the blending cup.
6. The blending cup is not suitable for use in a microwave.


Warning:

- **WARNING!** To charge this product, only use a certified suitable power supply unit with an output rating of 5V, 2A. Using a noncertified or incorrect power supply unit may cause hazards or serious injuries.
- Do not expose the appliance or battery to excessive temperatures.
- Recommended ambient temperature for charging is 5°C to 40°C.
- Charging outside of this temperature range may cause the battery to leak, generate heat, or result in serious damage. It may also cause the battery's performance and life to deteriorate.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
- If you need support in finding the correct USB power supply unit, contact the Cuisinart Customer Care Line for further information.
- Keep the USB cable, USB supply unit and accessories dry.
- **WARNING!** Using a non-certified supply unit may cause hazards or serious injuries.
- Please contact Cuisinart customer service for a compatible power supply if required.

Table Of Contents

|                          |   |
|--------------------------|---|
| Important Safeguards     | 2 |
| Safety During Use        | 4 |
| Warning                  | 5 |
| Parts & Features         | 6 |
| Instructions For Use     | 6 |
| Cleaning and Maintenance | 8 |
| Warranty.                | 8 |

Parts & Features

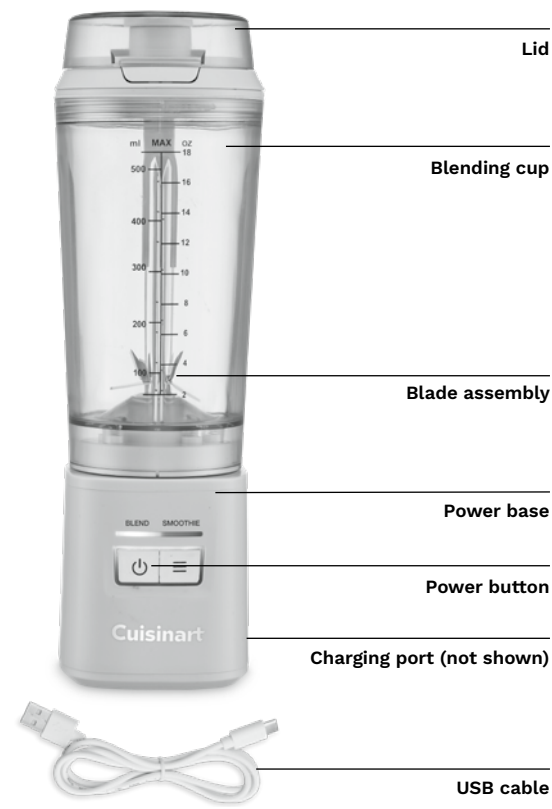

Operating Instructions

Before first use, we recommend that you wipe the main unit with a clean, damp cloth to remove any dirt or dust. Dry it thoroughly with a soft absorbent cloth. Carefully clean the blending cup and drinking lid in warm soapy water.

**N.B.** Do not use abrasive cleaners, hard implements or a scourer.

A. Charging the Blender

The batteries in your Blender have not been fully

charged. Before using, the batteries must be charged until the entire light ring is illuminated in green. Your Blender will be fully charged in approximately 2.5 hours.

B. Operation

1. Ensure your blender is charged.
2. Put the ingredients into the blending cup and secure the lid. **NOTE:** Be careful not to exceed the maximum fill line. For best results, always put the softer ingredients and liquids into the cup first and finish with the hardest ingredients (ice cubes, frozen fruit, etc).
3. Ensure the power base is sitting on a clean, dry surface. Place the blending cup onto the power base and turn to lock into place. You will feel a click when the cup is securely in place. Always ensure it is locked into place before using the blender. **NOTE:** If the cup is not properly attached, the blender will not operate and will illuminate yellow.
4. To operate, press the power button once to illuminate the controls, blue illumination signals powering on. Once the light signals green, use the button to select either Blend or Smoothie. Once ready, press the power button again to begin blending. **NOTE:** blending will automatically stop after 30 seconds. If your recipe requires more than a minute of blending, simply pause for a few seconds and then start the blender again.
5. Once your ingredients are blended, remove the blending cup from the base by twisting to unlock. **NOTE:** Do not try to remove the blending cup whilst the motor is still running. If the cup is unlocked during blending, the blender will automatically stop.

C. Hints & Tips

- For best results when using your Blender, always put the softer ingredients and liquids into the cup first and finish with the hardest ingredients (ice cubes, frozen fruit, etc).
- It is recommended that most foods be cut into 2cm pieces to achieve the most uniform result.
- If food sticks to the sides of the cup when blending, stop the blender, remove the cup and gently shake the cup. Replace and blend again.

- When blending thicker mixtures, lightly hold down the top of the cup to prevent jumping on the surface.
- Some recipes may require more than a minute of blending. Simply start the blender again.

Cleaning & Maintenance

Always clean the appliance thoroughly after use. Clean the main unit with a sponge or damp cloth only. Do not use abrasive cleaners that could scratch the surface. The blending cup and drinking lid can be washed in warm soapy water or cleaned on the top rack of the dishwasher.

**CAUTION:** Handle the blade carefully. The blades are sharp and may cause injury. DO NOT attempt to remove blades.

Warranty

Cuisinart warrants that, in the unlikely event that this product develops any malfunction within 36 months of purchase of the product used for household or domestic use (or within 3 months of purchase of the product used for commercial use) due to faulty workmanship, materials or manufacture, we will either (at our discretion) repair or replace it for you.

This warranty applies for a period of 36 months for products purchased for household or domestic use (and 3 months for products purchased for commercial use) from the date of purchase of the product after which time the warranty expires and has no further force of effect.

Should you experience any operating difficulties refer to the FAQ in this booklet or contact Customer Service for advice on **1800 566 567 in Australia or 0800 456 546 in New Zealand.**

Please retain your **Purchase Receipt** as proof of purchase in order for your warranty entitlement to be valid. This document must be presented in the event of making a claim under the terms of the Cuisinart Warranty Policy.

During the warranty period Cuisinart will repair or replace (at our discretion) any defective product. However, if the product includes a number of accessories, only the defective part or relevant accessory will be replaced. Cuisinart reserves the right to make minor adjustments to fix any defect

instead of replacing the entire product or accessory. Packaging, instructions, recipe books etc. will not be replaced unless faulty. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

If a spare part is required under warranty it will be shipped to the customer or retailer at No Charge.

In the event of a product or accessory being replaced during the warranty period, the guarantee on the replacement product or accessory will expire 36 months for household or domestic use (or 3 months for commercial use) from the original purchase date.

This warranty does not include or cover the following:

- Defects caused by the product not being used in accordance with instructions;
- Defects caused by accidental damage;
- Defects caused by misuse or negligent handling of the product;
- Defects caused by the product not being maintained or cleaned according to instructions;
- Defects caused by being tampered with by unauthorised persons;
- Defects which are normal or fair wear and tear;
- Freight or any other costs incurred in making a claim;
- Consumable items or accessories that by their nature and limited lifespan require periodic renewal (such as filters, seals, blades or related accessories, such as trays, racks or utensils);
- Products serviced or modified other than by Cuisinart or an authorised Cuisinart representative;
- To any claims made beyond 12 months if the filament of the light bulb breaks i.e. the light bulb has burned out;
- Exposure of the product to abnormally corrosive conditions;
- Any product which has its serial number or appliance plate removed or defaced;
- To any claims made beyond 3 months from the date of purchase if the product is used in commercial, industrial, educational or rental applications; or
- To any claims made beyond 36 months from the

date of purchase if the product is used in household or domestic applications.

- Products purchased from any person who is not a retailer serviced by Conair’s authorised distributors, overseas retailers, parallel importers or purchased second hand.

**The benefits given to you by our warranty are in addition to other rights and remedies under the Australian Consumer Law.**

**In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

**Our goods also come with guarantees that cannot be excluded under the New Zealand Guarantees Act.**

**To make a warranty claim or spare part, contact our customer service agents:**

Cuisinart Australia

**Ph: 1800 566 567**

PO Box 146, Terrey Hills  
NSW 2084 AUSTRALIA

Cuisinart New Zealand

**Ph: 0800 456 546**

YOU MUST provide your full name, address, email and phone details. A copy of your proof of purchase must be supplied.

**You can contact Cuisinart Australia/New Zealand via email at [aus\\_cuisinart@conair.com](mailto:aus_cuisinart@conair.com) or through the “Contact Us” option on the Cuisinart website [www.cuisinart.com.au](http://www.cuisinart.com.au)**

The warranty contained in this document is provided by:

Conair Australia Pty Ltd (ACN 068 492 044)  
(Cuisinart)

18 Rodborough Rd,  
Frenchs Forest, NSW 2086

Australia